
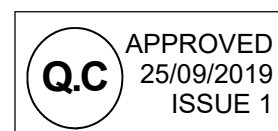


VENTILADOR DE TECHO SVAN SVVE 42T

Manual de Instrucciones e Instalación—Mantenga este Manual

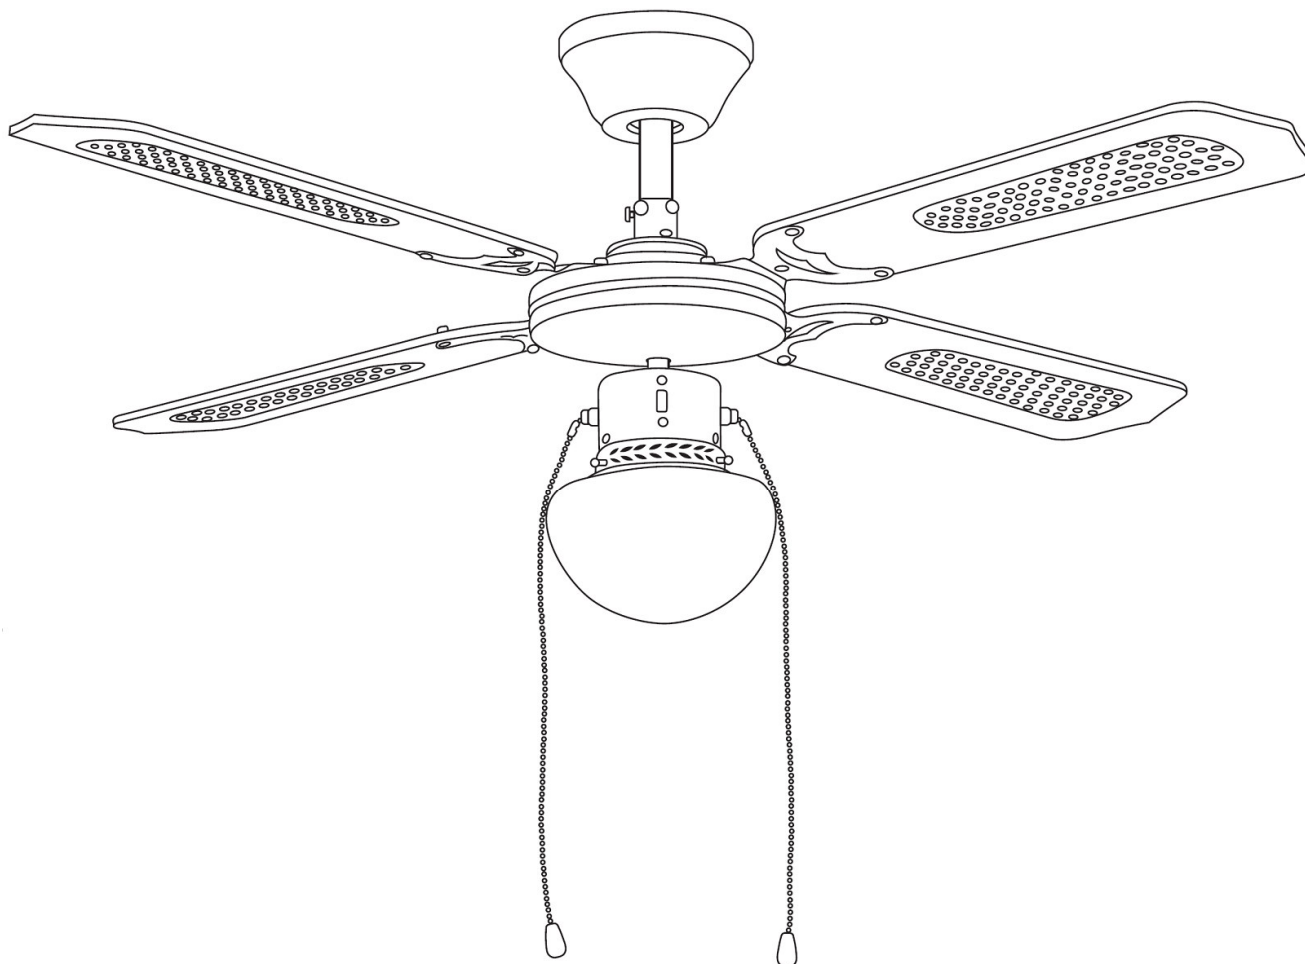

Contenido

Contenido	Página	Contenido	Página
Cuidados y Seguridad	2	Instalación—Palas y Eje	4
Limpieza, Ubicación & Reverse	2	Instalación—Cuerpo & Instalación luz—	5
Partes del aparato	3	Montaje del ventilador & cableado	6


Montaje del soporte de techo

For normal plasterboard ceilings, ensure the bracket is secured to a ceiling joist or brace.

For concrete ceilings drill pilot holes, and secure bracket with the anchoring screws provided.

1. Use the bracket as a template to mark 2 holes on the ceiling.
2. Using the appropriate fixings, secure the bracket to the ceiling.
3. Connect the mains supply wires to the connector block, fixed to the ceiling bracket. Then connect the supply wires from the fan to the corresponding terminals on the connector block. (The Red Fan Live & Brown Light Live wires will go into the same terminal.) DIA.1
4. Lift the ceiling fan up to the ceiling bracket & slot the top hat of the shaft onto the bracket. Twist the shaft until you feel it drop & lock in place.
5. Lift the ceiling can up to the bracket and place over the screws, then turn to lock in place as shown in DIA.2.

Using the pull cords, turn on the fan motor and light to test the operation.

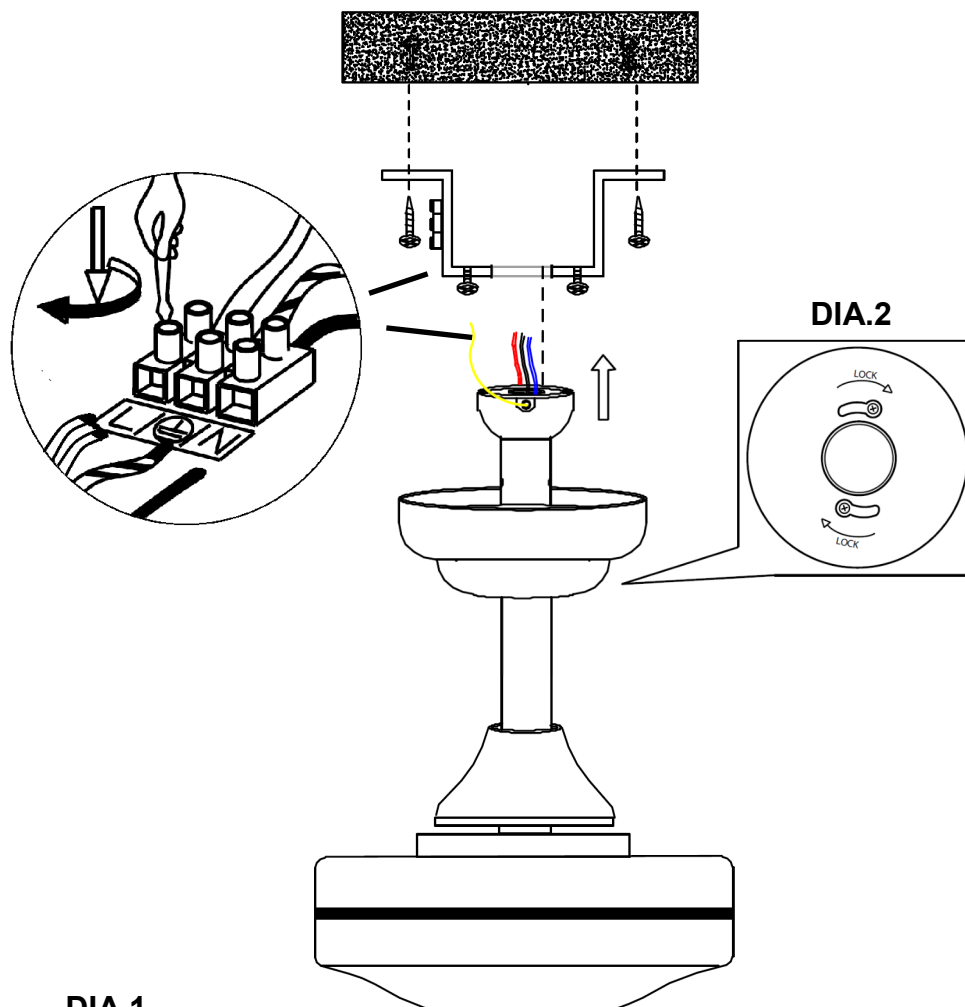

DIA.1

